


AT500H INSTALLATION INSTRUCTIONS

- Step 1: Measure 4" from AT500H arm bracket and mount CT applicator bracket with (2) U-bolts & nuts. (Photo 1)**
- Step 2: Mount CT support arm above AT500H arm bracket with (1) U-bracket & nuts. (Photo 2)**
- Step 3: Mount CT Dry Applicator to applicator bracket with (2) 1" bolts and nuts. (Photo 3)**
- Step 4: Connect applicator to the AT500H auger using supplied hose and coupler. (Photo 4)**
- Step 5: Can leave CT control box mounted on applicator (A) or can move to lower arm on AT500H (B). (Photo 5)**
- Step 6: Run signal cord to USC automated panel along frame using zip ties. Plug into available port on USC panel.**
- Step 7: Plug CT power cord into 110v outlet.**

Photo 1

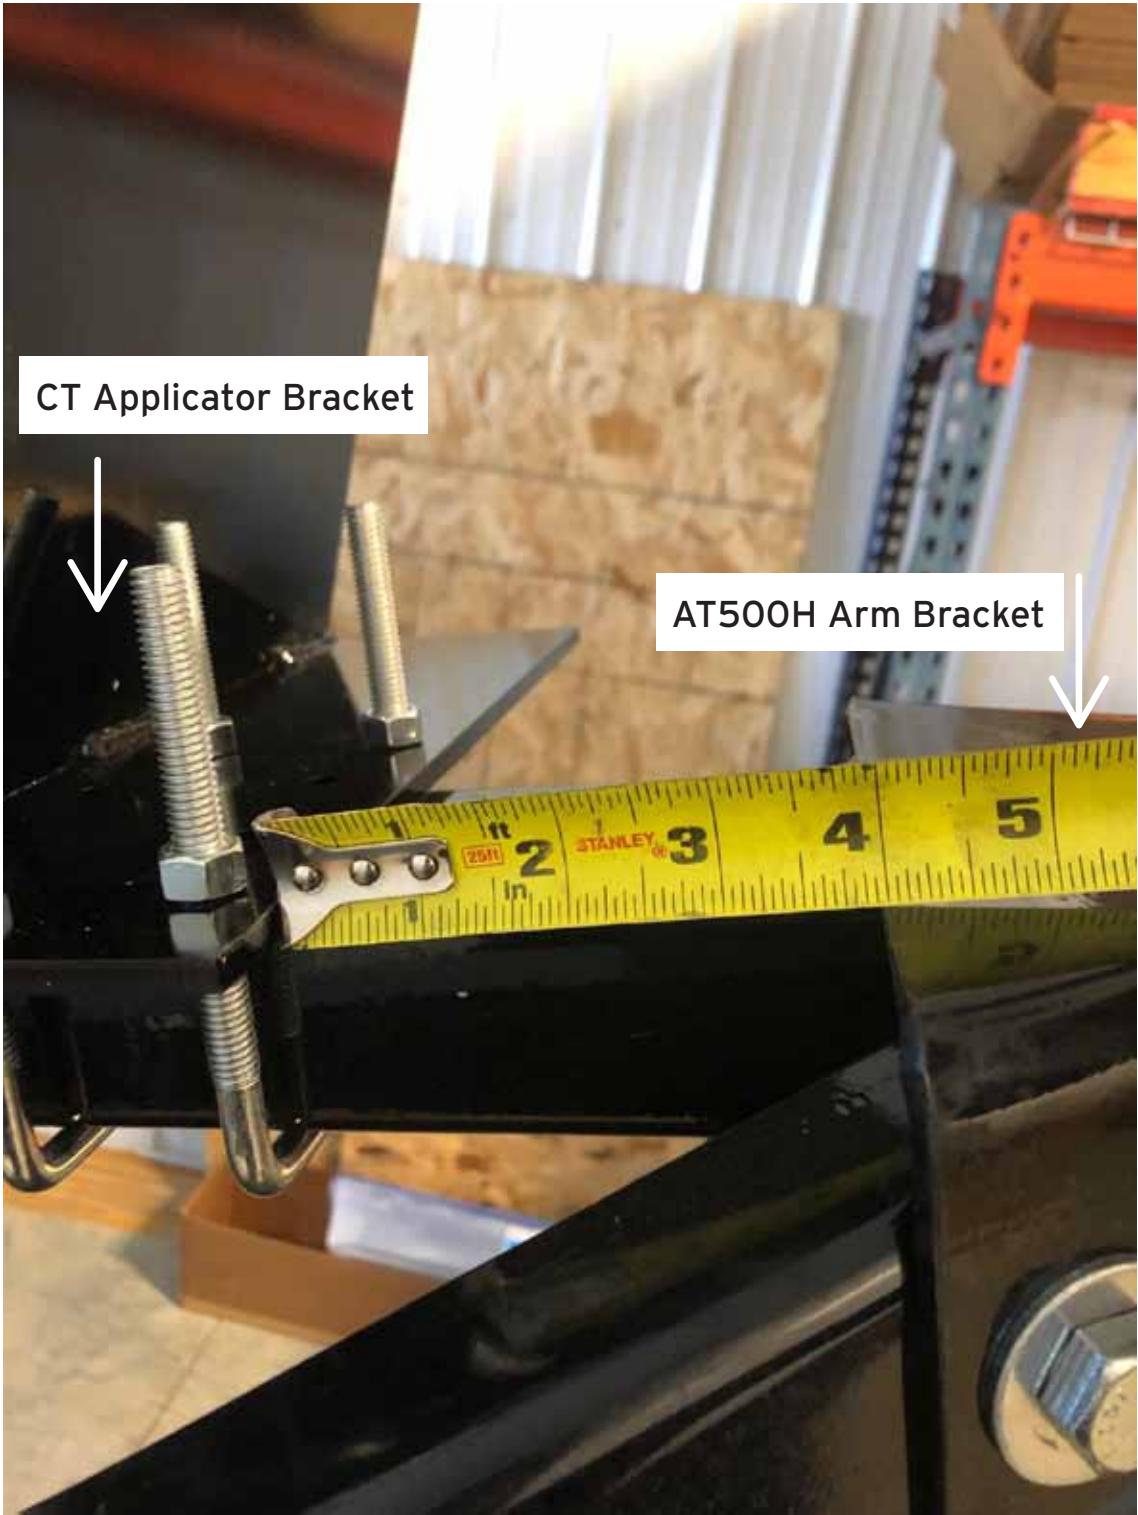

CT Applicator Bracket

AT500H Arm Bracket

Photo 2

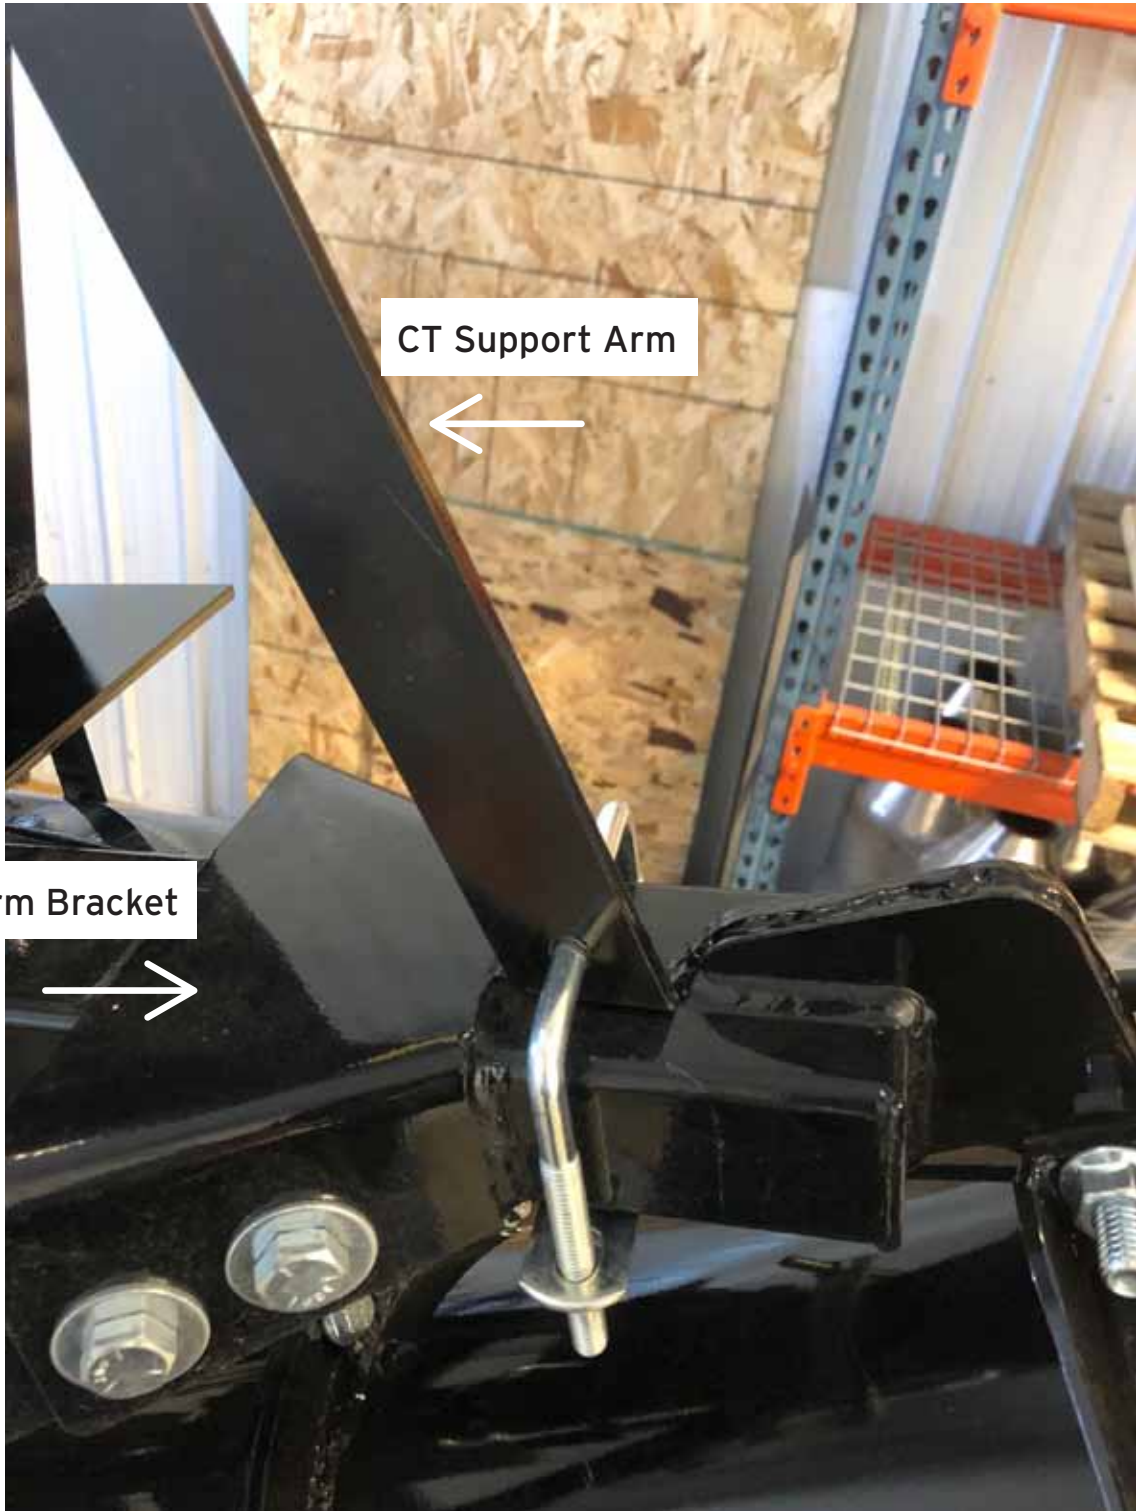


Photo 3

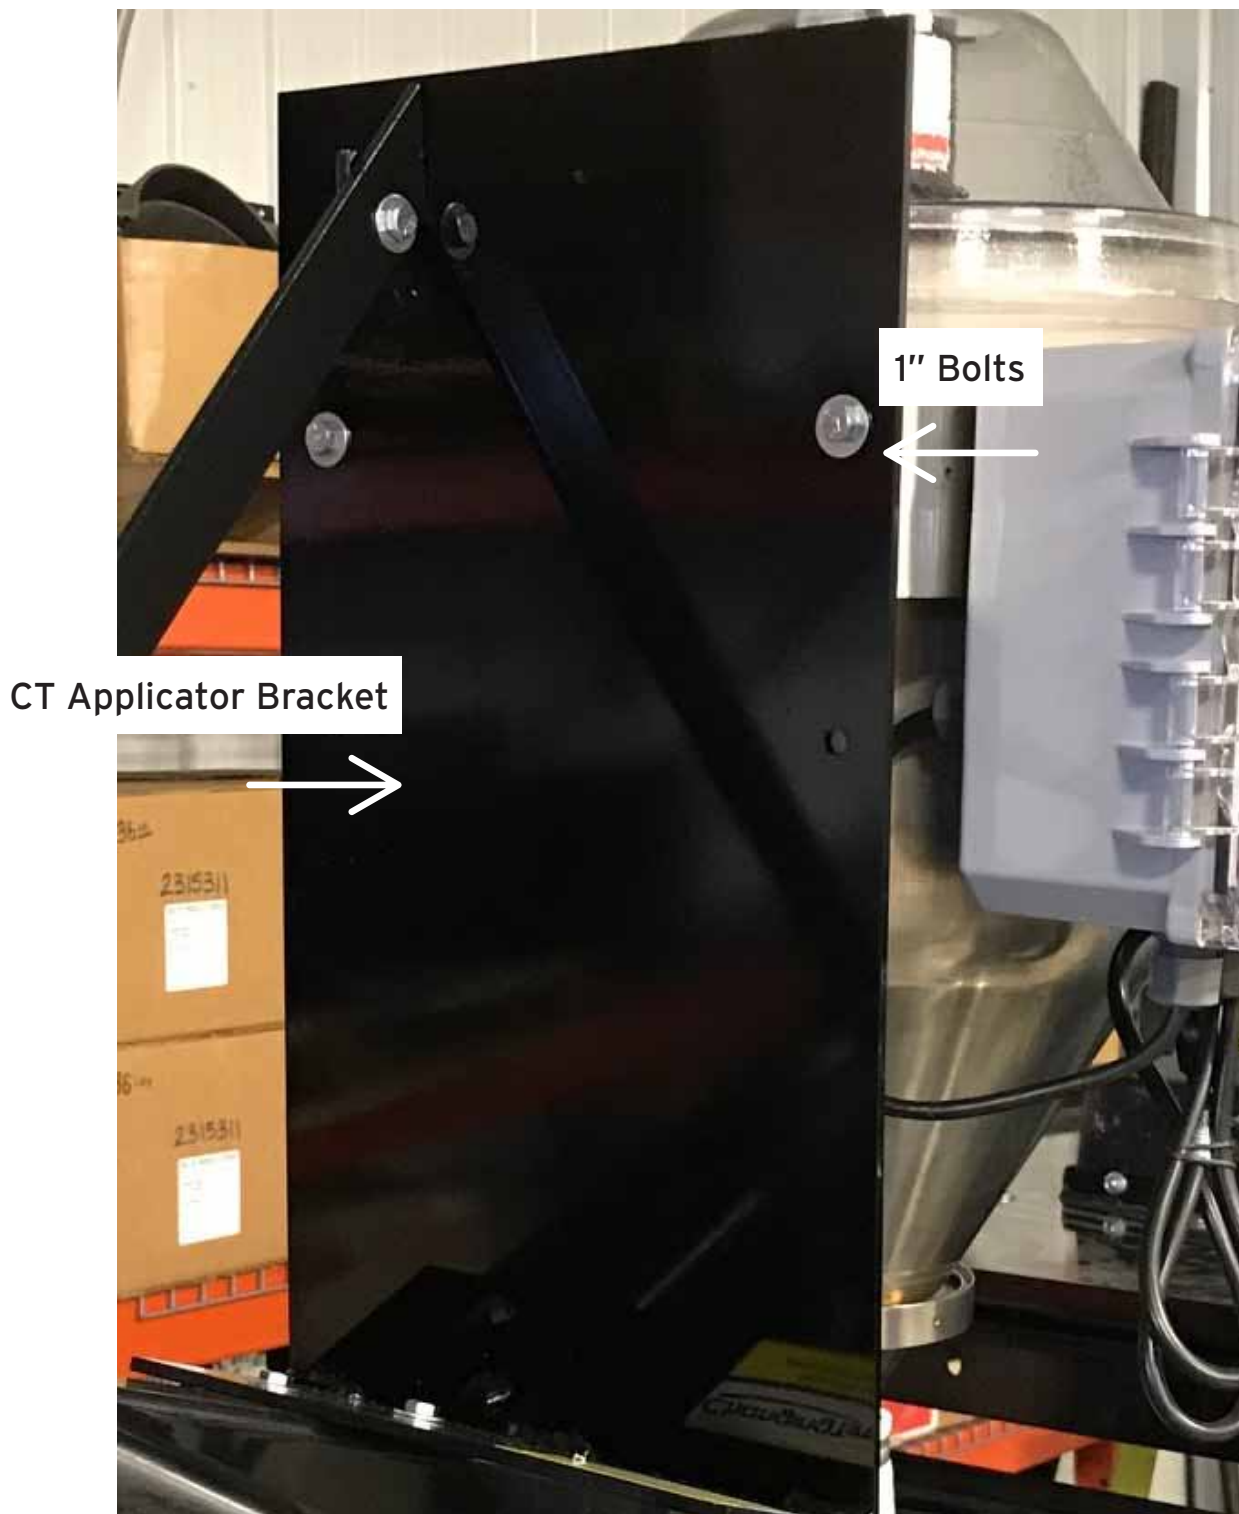


Photo 4



Photo 5

